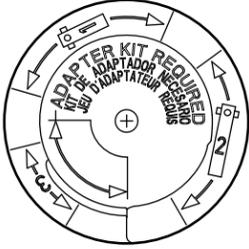
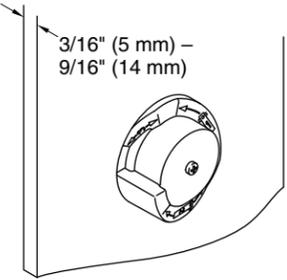
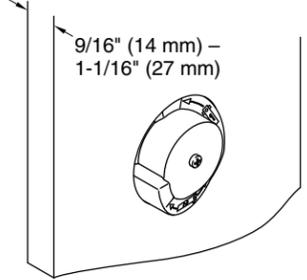
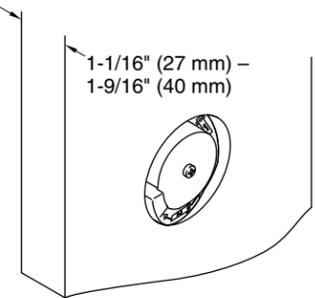
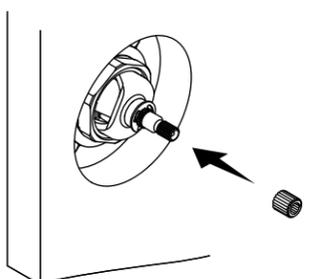
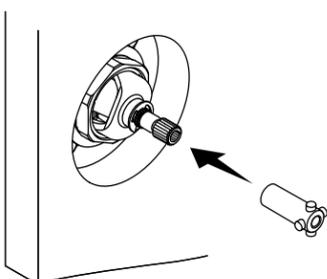
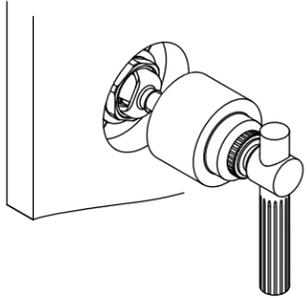
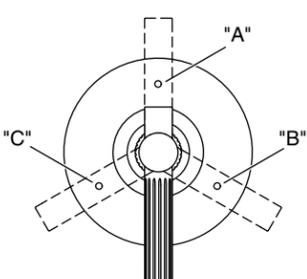
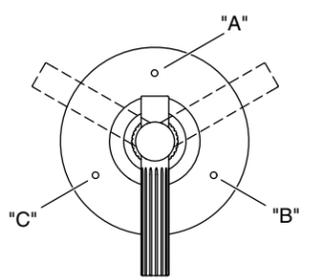
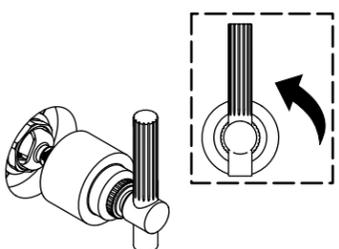
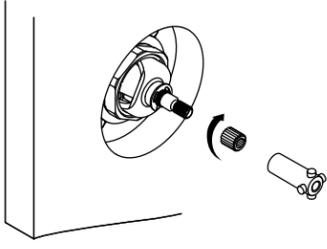
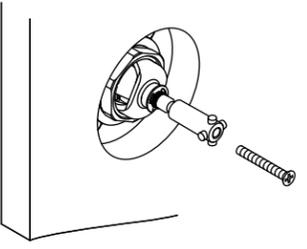
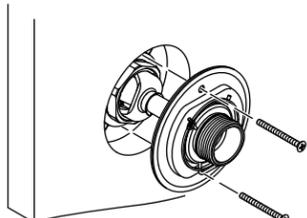
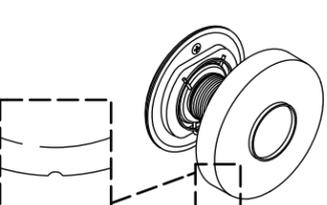
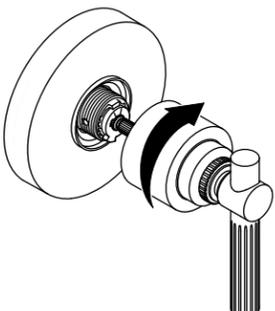


<p>Record your model number.</p>	<p>Important Information Follow all local plumbing and building codes.</p>	<p>1 Determine the valve stem adapter length. Refer to the plaster guard.</p> 	<p>Thin Wall: Use the #3 adapter and the 13/16" (21 mm) screw.</p> 	<p>Standard Wall: Use the #1 adapter and the 13/16" (21 mm) screw.</p> 
<p>Thick Wall: Use the #2 adapter and the 1-3/8" (35 mm) screw.</p> 	<p>2 Remove the plaster guard. Place the spline adapter on the valve stem.</p> 	<p>3 Temporarily fit the valve stem adapter on the spline adapter.</p> 	<p>4 Position the handle on the valve stem adapter.</p> 	<p>5 For Water Flow From Single Shower Accessory: Align the handle with position A, B, or C on the faceplate.</p> 
<p>6 For Water Flow From Two Shower Accessories: Align the handle between positions A and B, B and C, or A and C.</p> 	<p>7 Water should flow from your main shower accessory with the handle position at 12 o'clock.</p> 	<p>8 To adjust position, remove the handle and valve stem adapter. Turn the spline adapter.</p> 	<p>9 Secure the valve stem adapter with the proper length screw.</p> 	<p>10 Secure the plate assembly to the valve with proper length screws. Do not overtighten.</p> 
<p>11 Position the faceplate with the notch at the bottom.</p> 	<p>12 Point the handle down. Thread the bonnet onto the valve.</p> 			

Questions? Problems? For additional assistance, please contact
KALLISTA's Customer Service Department at 1-888-4-KALLISTA
(1-888-452-5547) or kallista.com.