



Record your model number.

Important Information
Observe all local codes.
Plumbing codes may require a backflow prevention device be installed in-line to handshowers.

1 Run water from the supply to flush debris. Then turn off the water.

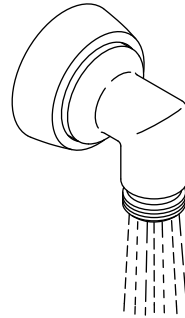


2 Insert a washer and connect the hose to the water supply.

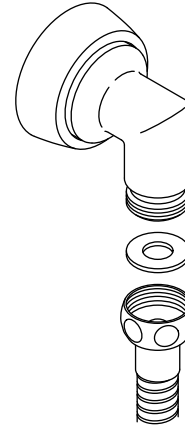


3 Insert a washer into the handshower end of the hose.




4 Thread the handshower into the hose.

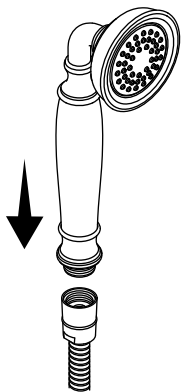


5 Tighten with an adjustable wrench.

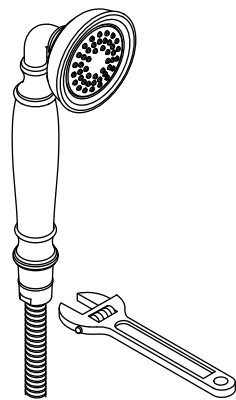

6 Turn on the water. Check for leaks.

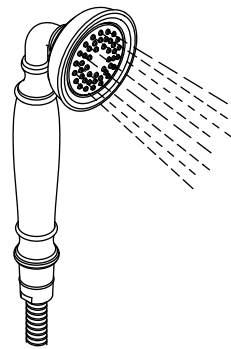

Maintenance:
With the water running, rub the nozzles to dislodge debris.

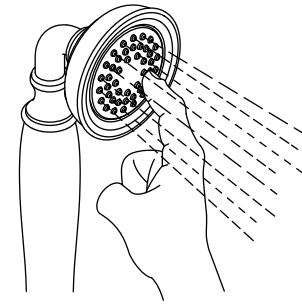

Questions? Problems? For additional assistance, please contact
KALLISTA's Customer Service Department at 1-888-4-KALLISTA
(1-888-452-5547) or kallista.com.