


INSTALLATION INSTRUCTIONS

# X1-1060


ZU 3-HOLE WALL BATH FILLER TRIM ONLY, TO SUIT R1-4018 ROUGH

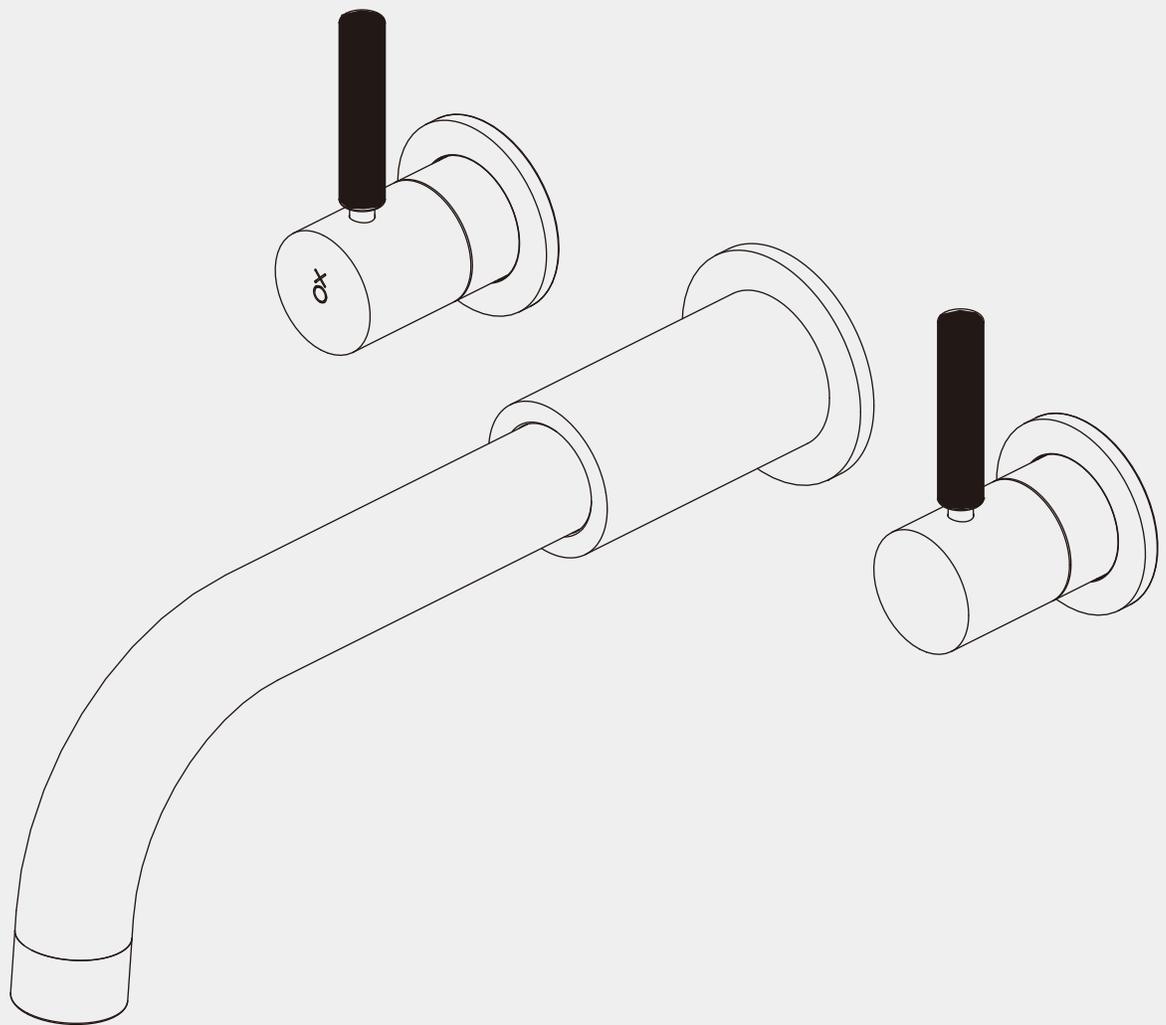

LEFROY BROOKS

# Dimensions in Inches (& Millimetres)

X1-1060

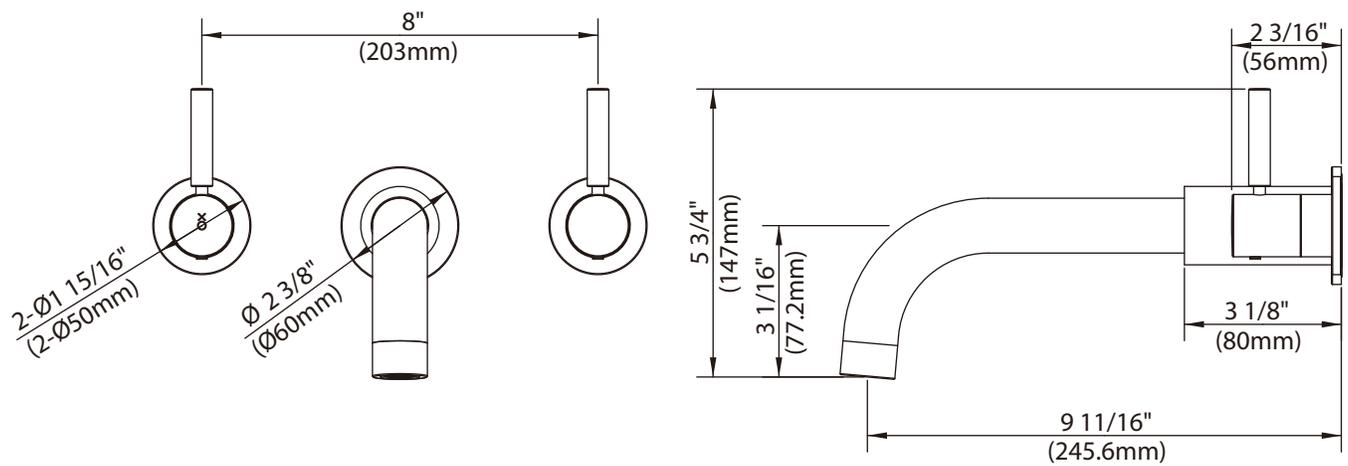


Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

# What you need to know

## Tools:

Adjustable Wrench  
Groove Joint Pliers  
Hacksaw  
Phillips Screwdriver  
Pipe Tape  
Spatula  
Spirit Level

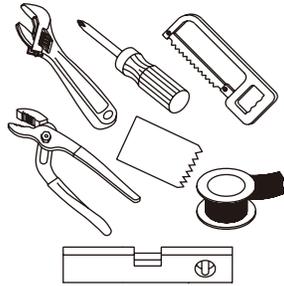

## Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

## Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

## Important Points

Prior to beginning installation, turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licensed plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should be equalized by a plumber in accordance with best practice and legislation.

## Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

## Standards


IAPMO/cUPC Listed  
Meets A112.18.1

# Steps 1-2


## Installation Procedure

---

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

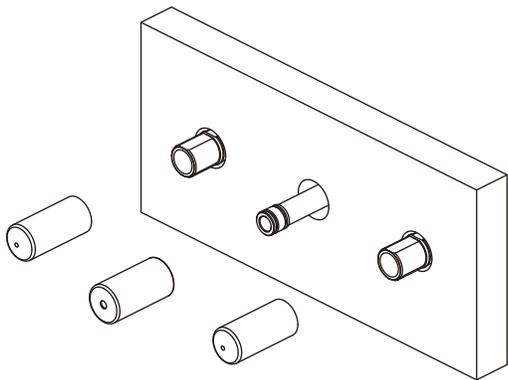

1

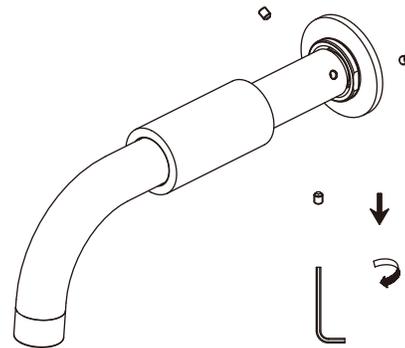

2

**1** Once the front wall is finished, remove the protective caps for installing the trim.


**2** Disassemble central canopy and spout by loosening the three grub screws.

# Steps 3-4


## Installation Procedure

---

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

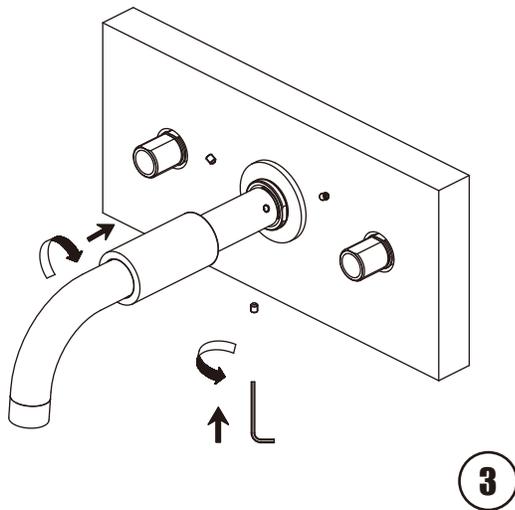

**3** Install the spout and then fix the central canopy onto the spout securely with the grub screws.

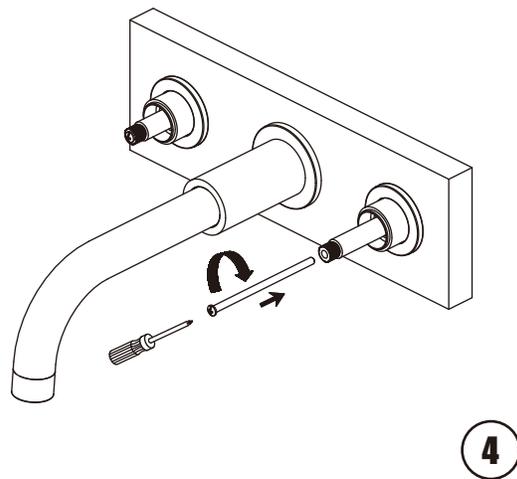


**4** Install stem extension to the rough and fix securely with screw.

# Steps 5-6


## Installation Procedure

---

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

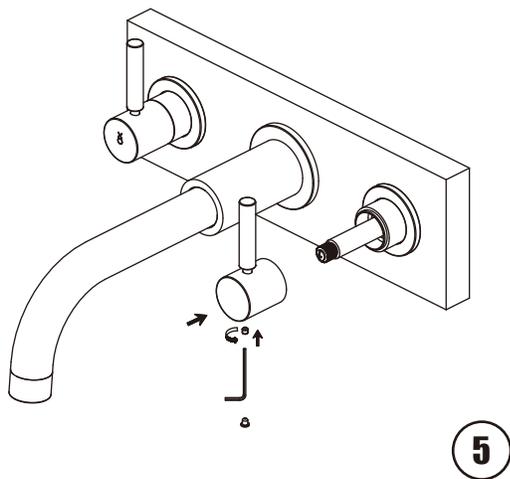

**5** Install and fix handle with set screw.

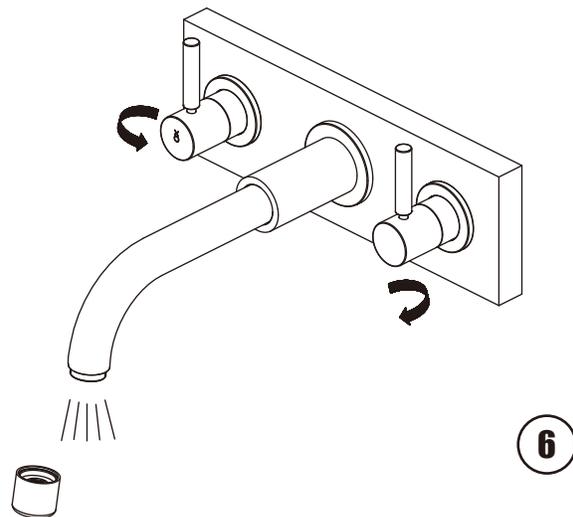


**6** After installing the faucet, remove aerator and open the hot and cold supplies. Check for leaks. Turn on the faucet handle for one minute to flush debris from the faucet. Turn off the handle and re-assemble the aerator.

# Exploded View

## Parts List

X1-1060

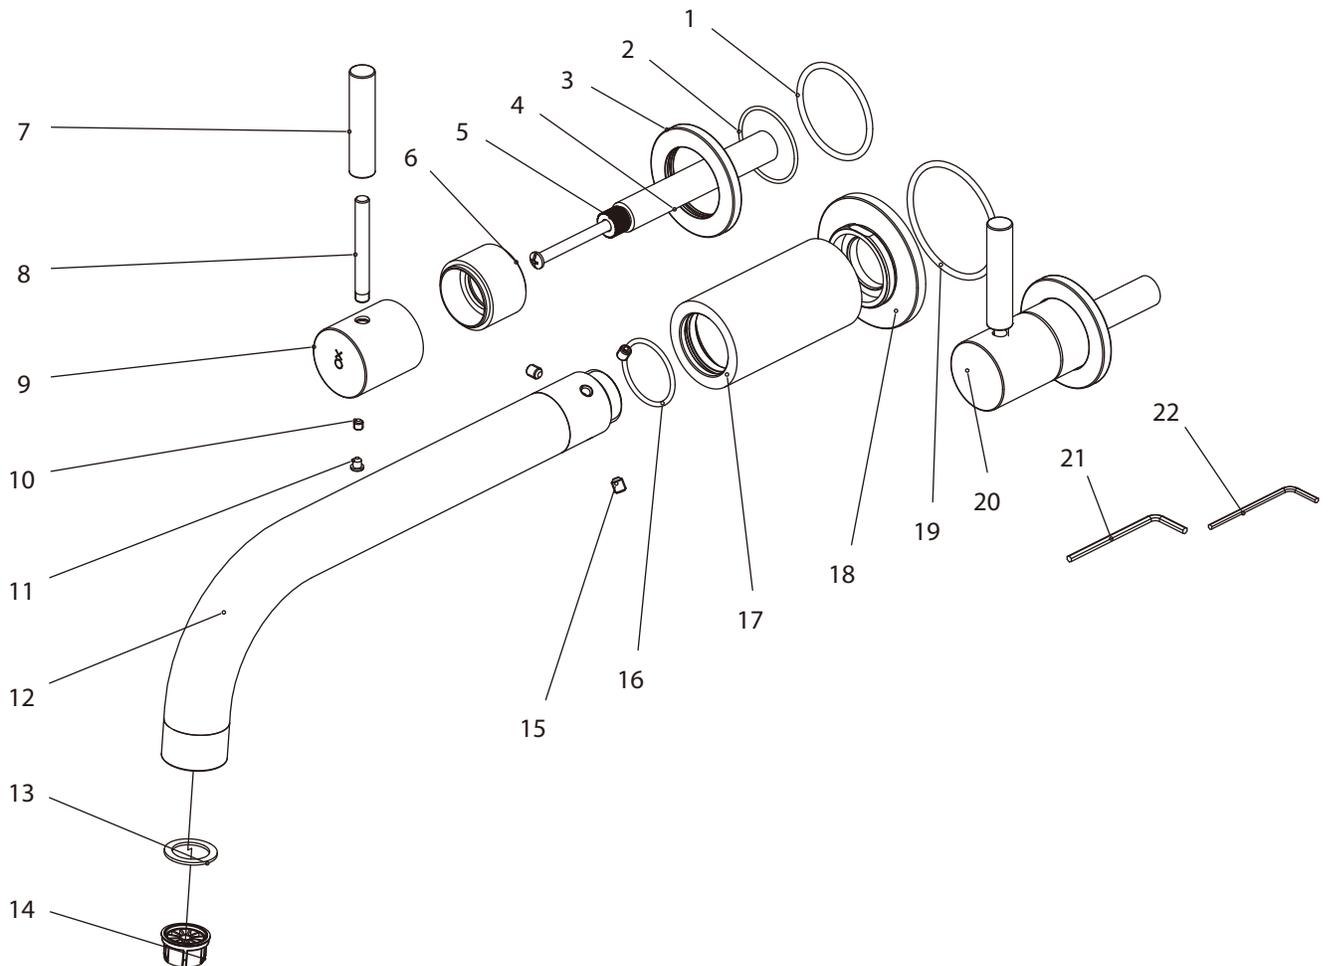

1	O-ring (004009N)	9	Handle seat (215502-50)	17	Canopy (000899)
2	O-ring (072063)	10	Set screw ( 065086)	18	Escutcheon (303081)
3	Escutcheon (019352)	11	Plug (028008)	19	O-ring (004567N)
4	Stem extension (110470)	12	Spout assembly (139902)	20	Handle seat (215502)
5	Screw (008258)	13	Oil seal (010899)	21	Allen key (031003)
6	Sleeve (041707)	14	Aerator insert (114237R)	22	Allen key (031000)
7	Handle sleeve (038104)	15	Set screw (075038)		
8	Handle stem (108926)	16	O-ring (072048N)		

For additional assistance or service call

**718-302-5292**

**9am to 5pm EST Monday to Friday**



LEFROY BROOKS

[www.lefroybrooks.com](http://www.lefroybrooks.com)

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385  
TELEPHONE: 718-302-5292. FAX: 718-302-4177

The use of trademarks, product design and artwork is subject to licence or agreement with LBIP Ltd. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited. The right to modify designs and dimensions is reserved. Christo Lefroy Brooks is a member of ACID (Anti Copying in Design).