

INSTALLATION INSTRUCTIONS

K1-4200

SINGLE HANDLE THERMOSTATIC ROUGH, TO SUIT K1-4400 & K1-4401


K1-4400

SINGLE CROSS HANDLE THERMOSTATIC TRIM ONLY, TO SUIT K1-4200 ROUGH


K1-4401

SINGLE LEVER THERMOSTATIC TRIM ONLY, TO SUIT K1-4200 ROUGH


K1-4200

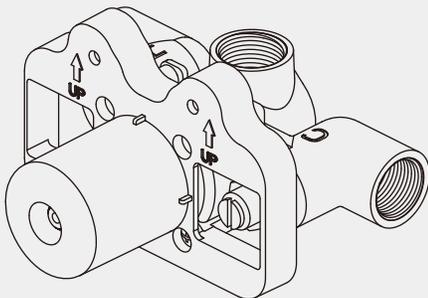

K1-4400

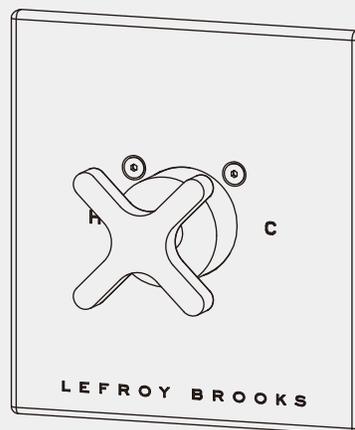


K1-4401

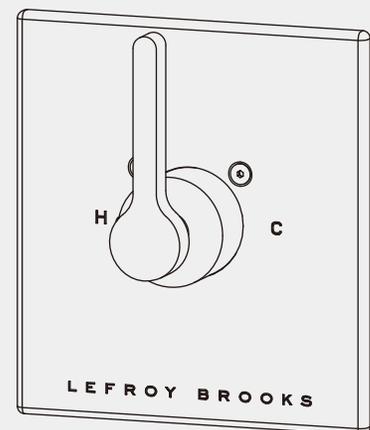


Dimensions in Inches (& Millimetres)


K1-4200

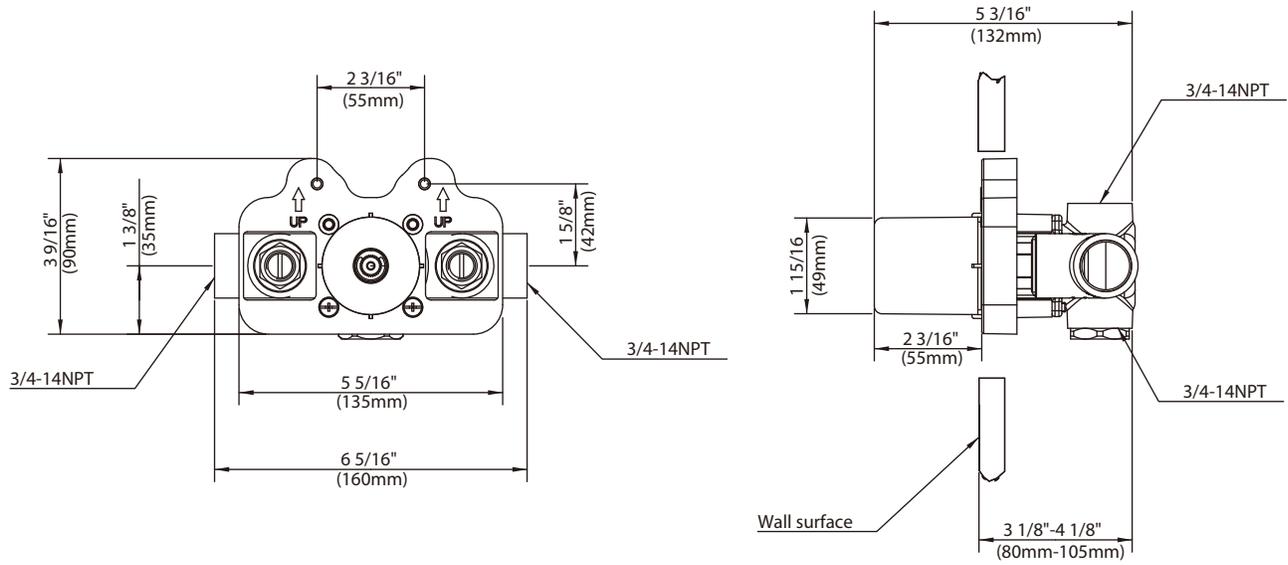

K1-4400

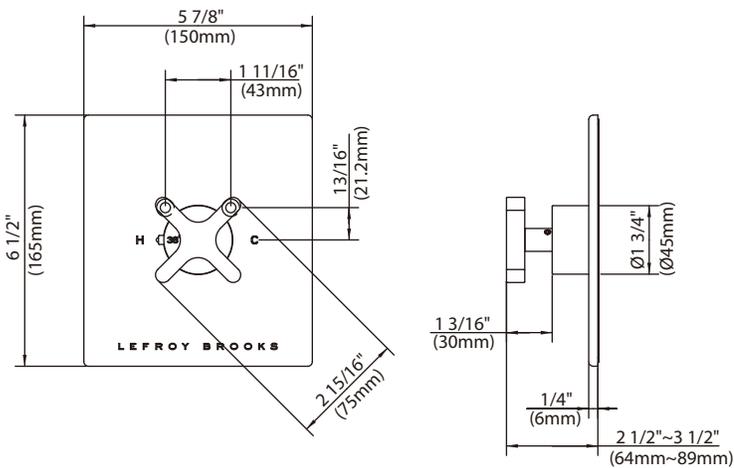

K1-4401

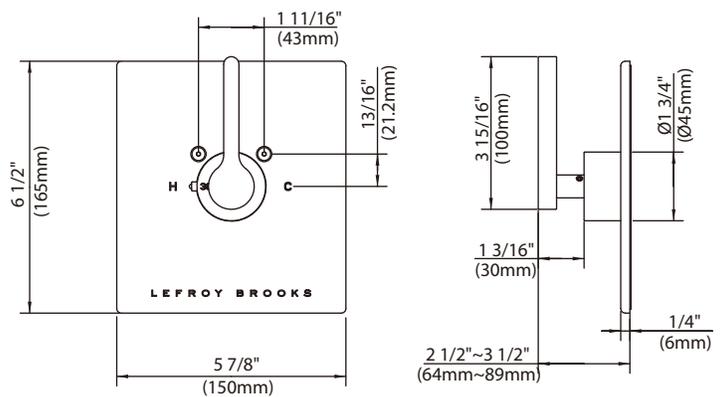


Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

What you need to know

Tools:

Adjustable Wrench
Groove Joint Pliers
Hacksaw
Phillips Screwdriver
Pipe Tape
Spatula
Spirit Level

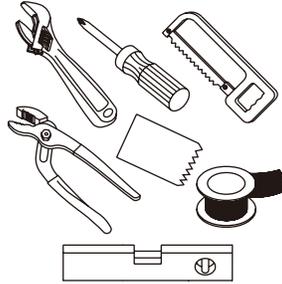

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

Standards

IAPMO/cUPC Listed
Meets A112.18.1
Meets ASSE 1016

Please note :

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Important Points

Prior to beginning installation, turn off the cold and hot water lines and open the old faucet to release built-up pressure.


Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licensed plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should be equalized by a plumber in accordance with best practice and legislation.


Flow Rate

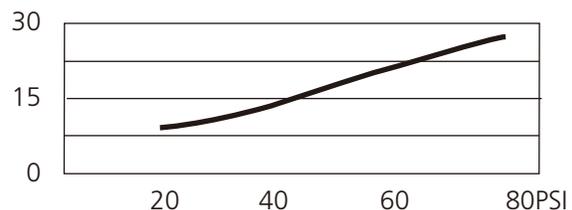

Steps 1-4

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

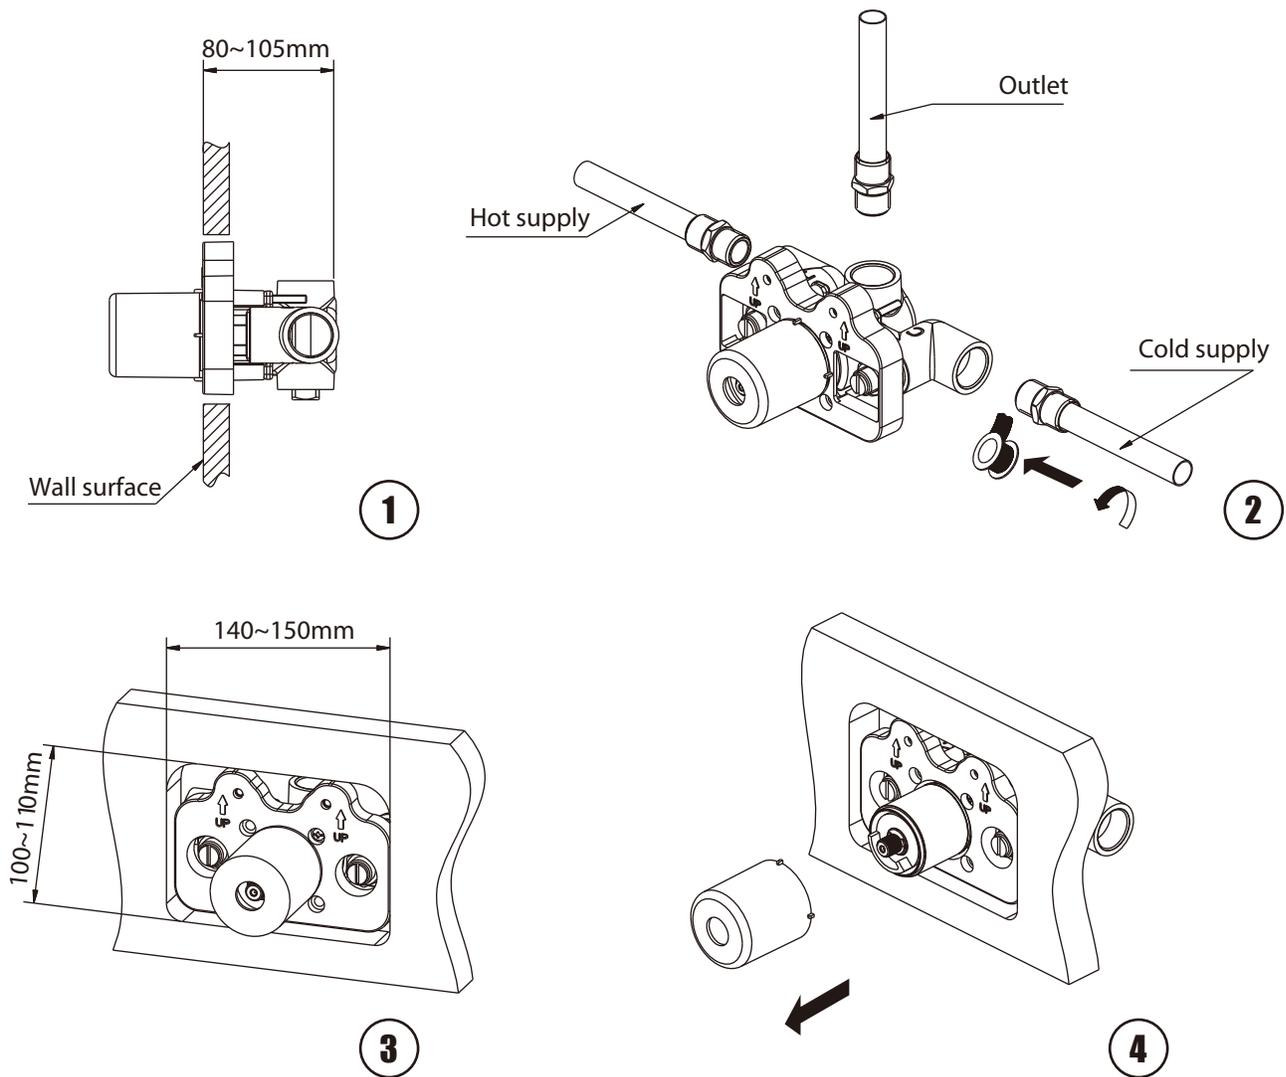

1 Before installing the valve into the wall, please note that a distance between 80mm~105mm from the wall surface to the rear of the valve should be left so that can fit the trim kit further.

2 Install vale assembly into the wall.


3 Cut a hole on the wall surface for fitting the trim kit. The hole dimension is as the figure instructed.

4 Throw away the protective caps just while the building construction is completed and you are ready to fit the trim kit in.

Steps 5-8

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

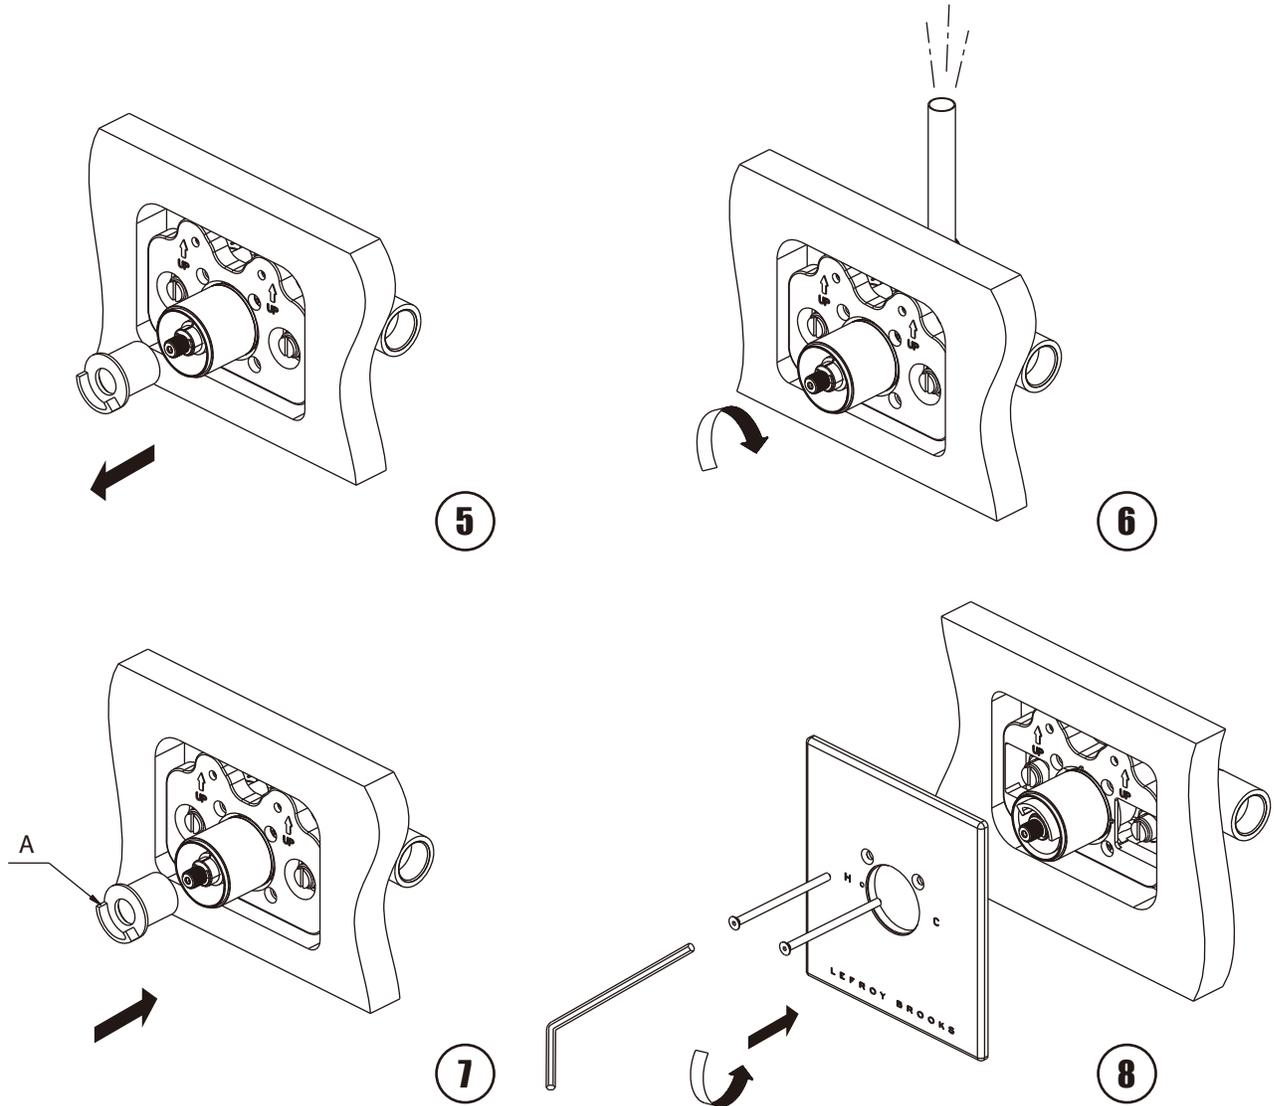

5 Take out the stopper.

7 Fix the stopper and make sure its "A" plane as mentioned is horizontal and on the left side.


6 Turn on the flow controller. Turn the thermostatic cartridge till you get the water temperature at 38°. Suggestion: attach a hose to the outlet and guide water to basin or a receiver to get the temperature and prevent it from wetting the floor.

8 Fix the front plate with screws.

Steps 9-11

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

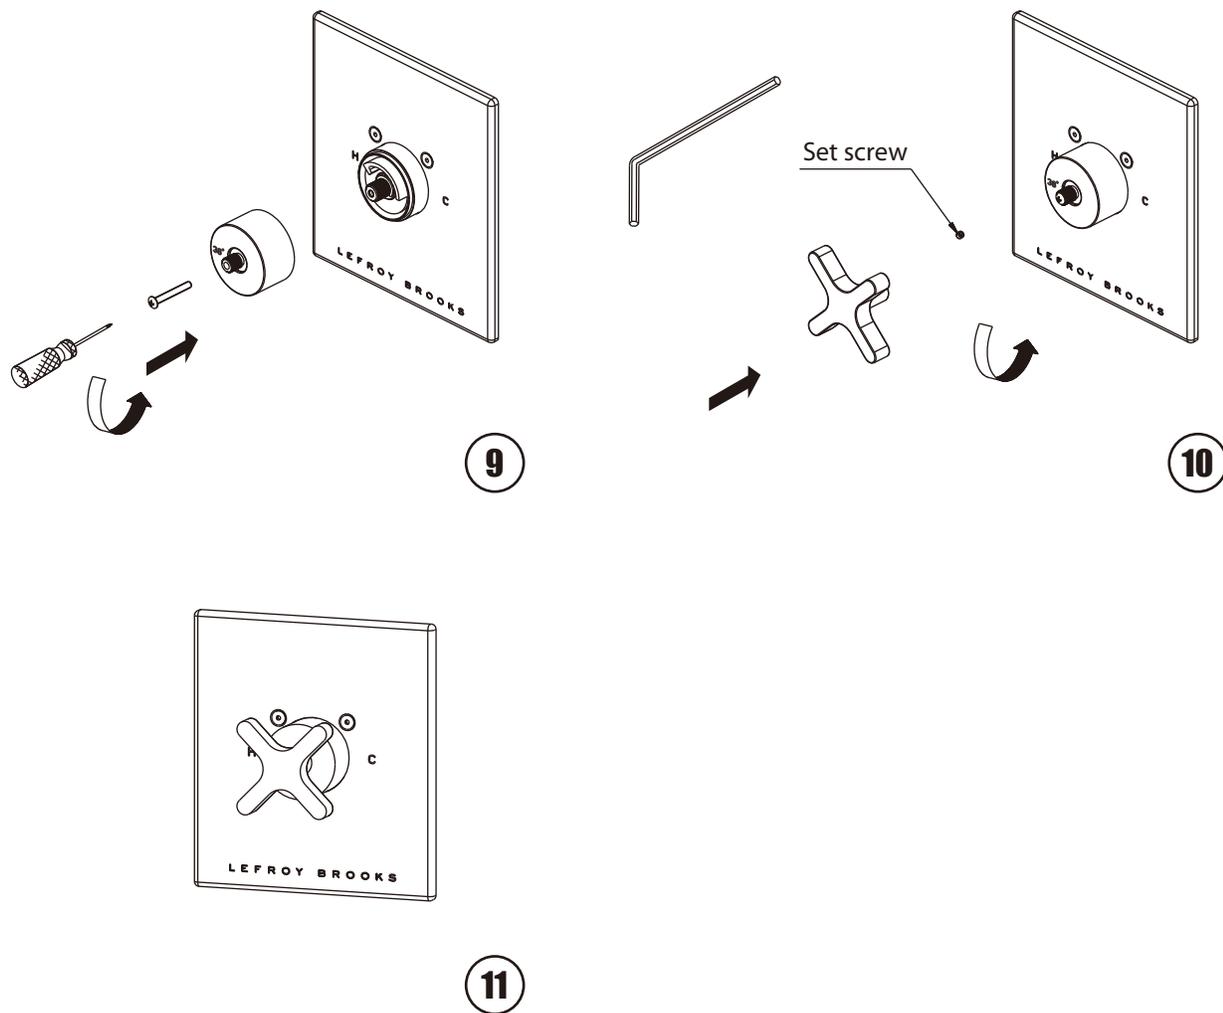

9 Fix the canopy with screw. When it is fixed, the temperature-limit-button is at horizontal position.


11 Finish.

10 Install handle assembly with set screws.

Exploded View


Parts List

K1-4200

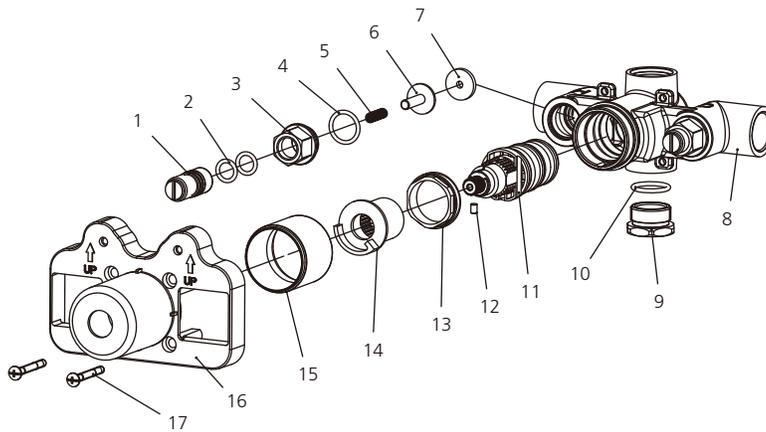


- 1 Spindle (017119)
- 2 O-ring (048038)
- 3 Nut (009111)
- 4 O-ring (063060)
- 5 Spring (005060)
- 6 Cartridge (024092)
- 7 Oil-seal (010113)
- 8 Body (076706)
- 9 Plug (028604)
- 10 O-ring (048017)
- 11 Thermostatic cartridge (507132)
- 12 Pin (003146)
- 13 Adjusting ring (104061)
- 14 Stopper (049108)
- 15 Sleeve (041754)
- 16 Plaster guard (127214)
- 17 Screw (008230)

K1-4400

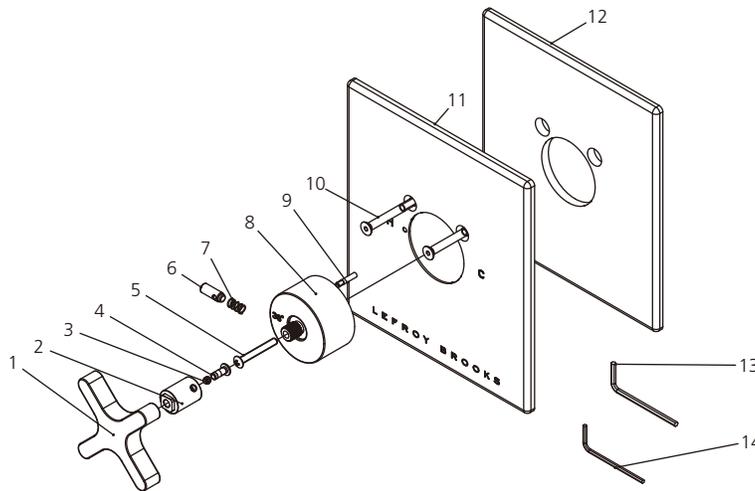

- 1 Handle (069688)
- 2 Extension stem (110405)
- 3 Screw (008772)
- 4 Screw (008154)
- 5 Screw (008994)
- 6 Button (036276)
- 7 Spring (005157)
- 8 Canopy (018421-50)
- 9 Pin (003153)
- 10 Screw (008793)
- 11 Front panel (006506-52)
- 12 Seal (068328)
- 13 Allen wrench (031000)
- 14 Allen wrench (031003)

K1-4401

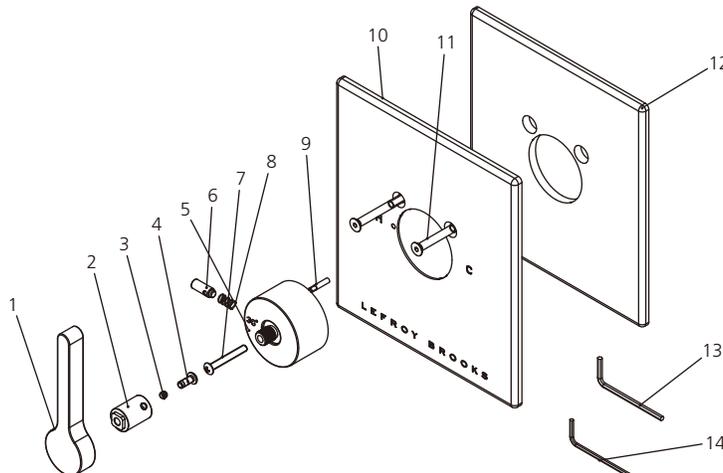

- 1 Handle (069699)
- 2 Extension stem (110405)
- 3 Screw (008772)
- 4 Screw (008154)
- 5 Button (036276)
- 6 Screw (005157)
- 7 Spring (008994)
- 8 Canopy (018421-50)
- 9 Pin (003153)
- 10 Front panel (006506-52)
- 11 Screw (008793)
- 12 Seal (068328)
- 13 Allen wrench (031000)
- 14 Allen wrench (031003)

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



LEFROY BROOKS

www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385
TELEPHONE: 718-302-5292. FAX: 718-302-4177

The use of trademarks, product design and artwork is subject to licence or agreement with LBIP Ltd. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited. The right to modify designs and dimensions is reserved. Christo Lefroy Brooks is a member of ACID (Anti Copying in Design).